

Gebrauchsanleitung
Lässig Digitale Spieluhr mit Bluetooth-Lautsprecher



Art. No. 1313021140/-141
Stand/Issue: 10/2020

ENTWICKELT IN
DEUTSCHLAND
HERGESTELLT IN
INDIEN

Inhalt
Stofftier
Bluetooth-Lautsprecher
USB Ladekabel
Gebrauchsanleitung

Altersempfehlung
Stofftier ab 2 Monaten
(Bluetooth-Lautsprecher
nur durch Erwachsene)

**Die Produktinformation
bitte aufbewahren.
Sie muss bei Weitergabe
an dritte Personen mit
ausgehändig werden.**

Wir wünschen viel Spaß
mit Ihrer Digitalen Spieluhr
von Lässig!

Ihr Lässig-Team.

Instruction manual
Lässig's Digital Musical
Pull Toy with Bluetooth
loudspeaker



Art. No. 1313021140/-141
Booth: 10/2020

DEVELOPED IN
GERMANY
MADE IN INDIA

Contents
Soft toy
Bluetooth loudspeaker
USB charging cable
manual

Recommended age
Soft toy from 2 months
and up.
(Bluetooth speaker only
to be operated by adults)

**Please keep this product
information. When passing
this article on to a third
person, this information
should be handed over.**

Have fun with your
digital musical pull toy
from LÄSSIG!

Your LÄSSIG team.

Notice d'utilisation
Boîte à musique numérique
avec enceinte Bluetooth de
Lässig



Art. N° 1313021140/-141
Date : 10/2020

DÉVELOPPÉ EN
ALLEMAGNE
FABRIQUÉ EN INDE

Contenu
peluche
enceinte Bluetooth
câble USB
notice d'utilisation

**Recommandations liées
à l'âge**
Recommandé aux enfants
à partir de 2 mois
(L'enceinte Bluetooth ne
doit être manipulée que
par des adultes)

**Veillez respecter les
consignes suivantes.
Veillez conserver la fiche
d'informations sur le
produit. Si vous donnez
la gourde à une tierce
personne, remettez-lui
également la fiche.**

Nous vous souhaitons
beaucoup de plaisir avec
la boîte à musique
numérique de Lässig !

L'équipe Lässig.

Instrucciones de uso
caja de música digital con
altavoz Bluetooth Lässig



Nr. de art. 1313021140/-141
Fecha: 10/2020

DISEÑADO EN ALEMANIA
FABRICADO EN INDIA

Contenido
Animal peluche
altavoz Bluetooth
cable de carga USB
instrucciones de uso

Edad recomendada
animal peluche a partir
de 2 meses (el altavoz
Bluetooth solo por adultos)

**Por favor, conserve la
información sobre este
producto. En el caso de
que éste fuera destinado
a terceras personas
incluya también estas
informaciones.**

¡Les deseamos mucha
diversión con su caja de
música digital Lässig!

Su equipo Lässig.

Manuale d'uso
Peluche musicale con
altoparlante Bluetooth
Lässig



N. art. 1313021140/-141
Ultimo aggiornamento:
10/2020.

SVILUPPATO IN
GERMANIA
PRODOTTO IN INDIA

Dotazione
peluche
altoparlante Bluetooth
cavo di ricarica USB
manuale d'uso

Età consigliata
peluche da 2 mesi
(altoparlante Bluetooth
solo per adulti)

**Conservare le presenti
informazioni sul prodotto.
Allegarle al prodotto in
caso di consegna ad altra
persona.**

Buon divertimento con il
peluche musicale Lässig!

Il team Lässig.

Gebruiksaanwijzing
Lässig digitale muziekdoos
met Bluetooth-luidspreker



Art. Nr. 1313021140/-141
Versie: 10/2020

ONTWORPEN IN DUITSLAND
GEPRODUCEERD IN INDIA

Inhoud
stoffen beest
Bluetooth-luidspreker
USB-oplaadkabel
gebruiksaanwijzing

Aanbevolen leeftijd
stoffen beest vanaf 2 maanden
(Bluetooth-luidspreker alleen
door volwassenen).

**Bewaar de productinformatie.
Deze moet bij doorgeven aan
derde personen mee worden
overhandigd.**

We wensen u veel plezier
met uw digitale muziekdoos
van Lässig!

Uw team van Lässig.

WEEE-Reg.Nr.: DE 12994765

GB Warning and safety instructions: CAUTION! For the safety and health of your child.


- This product should only be used under adult supervision.
- Examine each product before using. Dispose of the product at the first sign of any damage or flaw.
- All packaging and fastening components are to be removed before use.
- The loudspeaker is removable: This must be removed before the toy is washed!
- Caution! Babies and toddlers must not be able to get a hold of the loudspeaker. After washing the soft toy, put the loudspeaker back into the toy and close the zipper completely!
- The loudspeaker may only be charged by adults. Remove the loudspeaker from the soft toy before charging.
- The charger used with the loudspeaker must be checked regularly for damage to cables, plugs, housing and other parts. If damaged, it must not be used until the damage has been repaired.
- The loudspeaker has a built-in rechargeable battery and must therefore not be exposed to excessive heat - sunshine, fire or the like. The battery could explode!
- Storage at min. -4°F max. 140°F
- Keep the loudspeaker out of reach of children. There are small parts that could be swallowed!
- Keep the charging cable out of reach of children. Risk of strangulation!
- Avoid overloading sockets or extension cords; this could otherwise cause a fire or give an electric shock.

Speaker:
Rated output = PO = 0.2 W
Frequency response = 400 Hz - 20 KHZ
Distortion factor = THD < 10%
Signal-to-noise [SNR] = S/N ≥ 75db
Resolution = ≥ 55db
Loudspeaker = 23mm; 4 Ω 0.7W
Dimensions = 38.5 x 38.5 x 28.5 mm

Bluetooth®
Bluetooth Version: V 5.0
Bluetooth Frequency: 2402 - 2480 MHz
Max. Transmission Power: 5,3 dBm
Range: max. 80 m

Components

- On/Off switch
- Bluetooth indicator [blue light]
- Charge indicator [red light]
- Loudspeaker
- Micro USB connection

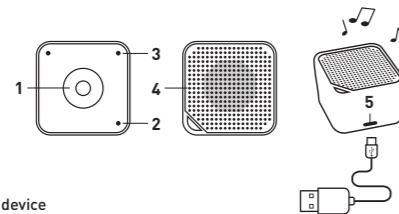

Description of function

1 Connecting loudspeaker with terminal device

- To switch On/Off just press and hold that button. A blue light flashes when the loudspeaker is switched on.
- Open the Bluetooth menu on the terminal device.
- Now double click on the On/Off switch of the loudspeaker, then the loudspeaker appears in the "LÄSSIG XXXX" on the terminal device.
- After the connection has been established, a beep will sound and the blue light will flash more slowly. The loudspeaker is now ready to play music or any other sounds.

2 Existing connections

- The last device that you connect to the terminal, will always be treated as the primary one. Once the connection is established, it is automatically established the next time the device is switched on [Bluetooth on the terminal device must be switched on].
- When a connection exists, no other device can be connected as a replacement. This means that existing connections cannot be used by a third party.


3 Disconnecting: After use, we recommend turning off the loudspeaker manually. The "one-button handling" allows you to turn off the loudspeaker simply by pressing the power button. You can do this on the soft toy.

WARNING - If the connected terminal device loses connection to the loudspeaker at a distance of 2-80 m, you will hear a warning signal. As soon as the terminal device is within reach of the loudspeaker again, the warning signal stops.

4 Charging: Please use a suitable device to charge the USB or DC5V adapter with the Micro-USB interface. Before using for the first time, the loudspeaker must be fully charged. During charging the light will turn red. The red light goes out when the loudspeaker is fully charged.

Instructions for use

- Before using for the first time, open the zipper and remove the loudspeaker and charging cable. Replace the charged loudspeaker in the body of the toy and close the zipper completely.
- Avoid dropping or knocking the toy as this can damage the electronic circuits.
- Ensure that the side with the On/Off switch faces outwards towards the zipper when you are inserting the zipper.
- Protect from moisture and do not allow it to get wet
- Wireless systems can cause interference to cordless phones, microwave ovens or other wireless devices operating in the 2.4GHz range. Keep the system at least 3 meters away from the equipment when installing or using it.
- All electrical connections and connecting cables must meet the relevant regulations and comply with the operating instructions.


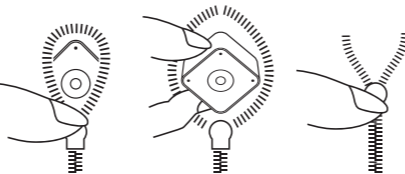


Guidelines for cleaning, care and maintenance

- The fabric cover of the product must be cleaned regularly [see washing instructions on the product label].
- Clean the loudspeaker with a dry cloth if necessary.
- The Bluetooth loudspeaker is maintenance-free and should therefore not be opened. Opening the device will void the warranty. Only clean the outside of the device.

Correct disposal

Damage to the environment due to incorrect disposal of the speaker: Ensure correct disposal of the product at the end of its life and do not throw it in the household waste.



The product must not be disposed of in household waste.

DE Warn- und Sicherheitshinweise: ACHTUNG! Zur Sicherheit und Gesundheit Ihres Kindes.


- Dieses Produkt darf nur unter Aufsicht von Erwachsenen verwendet werden.
- Vor jeder Benutzung ist das Produkt zu untersuchen. Beim ersten Anzeichen einer Beschädigung oder Schwachstelle ist es wegzuerwerfen.
- Alle Verpackungs- und Befestigungsteile sind vor Gebrauch zu entfernen.
- Der Lautsprecher ist herausnehmbar: Bitte immer vor dem Waschen aus dem Stofftier entfernen!
- Achtung! Der Lautsprecher darf nicht in die Hände von Babys und Kleinkindern gelangen und muss nach dem Waschen des Stofftiers wieder in dieses hineingelegt und der Reißverschluss vollständig geschlossen werden!
- Der Lautsprecher darf nur von Erwachsenen geladen werden. Den Lautsprecher vor dem Aufladen aus dem Stofftier entfernen.
- Die mit dem Lautsprecher verwendeten Ladegeräte sind regelmäßig auf Beschädigungen an Kabel, Stecker, Gehäuse und anderen Teilen zu überprüfen und dürfen im Falle einer Beschädigung erst nach Behebung des Schadens verwendet werden.
- Der Lautsprecher hat einen eingebauten Akku und darf somit keiner übermäßigen Wärme wie Sonnenschein, Feuer oder Ähnlichem ausgesetzt werden. Der Akku könnte explodieren.
- Aufbewahrung bei min. -20°C max. 60°C
- Den Lautsprecher von Kindern fernhalten. Verschluckbare Kleinteile!
- Das Ladekabel außerhalb der Reichweite von Kindern aufbewahren. Strangulierungsgefahr!
- Vermeiden Sie die Überlastung von Steckdosen oder Verlängerungskabeln; dies könnte sonst zu einem Brand oder Stromschlag führen.

Lautsprecher:
Nennleistung = PO = 0.2 W
Frequenzgang = 400 Hz - 20 KHZ
Klirrfaktor = THD < 10%
Signal-Rauschabstand [SNR] = S/N ≥ 75db
Auflösung = ≥ 55db
Lautsprecher = 23mm; 4 Ω 0.7W
Abmessungen = 38,5 x 38,5 x 28,5 mm

Bluetooth®
Bluetooth Version: V 5.0
Bluetooth Frequenzbereich: 2402 - 2480 MHz
Max. Sendeleistung: 5,3 dBm
Reichweite: max. 80 m

Komponenten

- Ein-/Ausschalter
- Bluetooth-Anzeige [blaue Leuchte]
- Ladeanzeige [rote Leuchte]
- Lautsprecher
- Micro USB Anschluss

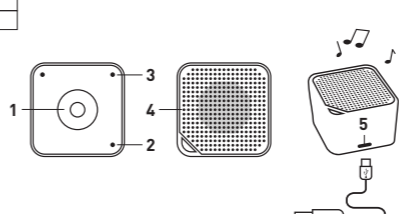

Funktionsbeschreibung

1 Lautsprecher mit Endgerät verbinden

- Knopf zum Ein-/Ausschalten lange gedrückt halten. Nach dem Einschalten des Lautsprechers blinkt ein blaues Licht.
- Bluetooth-Menü auf Endgerät öffnen.
- Jetzt einen Doppelklick am Ein-/Ausschalter des Lautsprechers vornehmen, dann erscheint der Lautsprecher unter "LÄSSIG XXXX" auf dem Endgerät.
- Nachdem die Verbindung hergestellt ist, ertönt ein Piepton und die blaue Leuchte blinkt langsamer. Der Lautsprecher ist nun bereit, Musik oder beliebige Sounds widerzugeben.


2 Bestehende Verbindungen

- Das zuletzt gekoppelte Endgerät wird immer primär behandelt. Ist das Endgerät einmal gekoppelt, wird die Verbindung beim nächsten Einschalten automatisch hergestellt [Bluetooth am Endgerät muss eingeschaltet sein].
- Bei bestehender Verbindung kann kein anderes Endgerät ersetzend verbunden werden. Das heißt, bestehende Verbindungen können von keinem Dritten verwendet werden.



LÄSSIG DIGITAL MUSIC BOX LÄSSIG DIGITALE SPIELUHR

Gebrauchsanleitung
Instruction manual
Notice d'utilisation
Instrucciones de uso
Manuale d'uso
Gebruiksaanwijzing



Das Produkt darf nicht im Hausmüll entsorgt werden.

